

# Unlock Instructions by EarthWizeCellular.com

---



## How to enter my Unlock Code on a Samsung Cell Phone?

### **Samsung i616 Jack or Blackjack2 from Fido Canada**

1. Power ON your phone with a FIDO SIM Card that the phone is locked to.
2. Enter: #7465625\*638\*
3. Network Lock Screen appears, enter UNLOCK CODE.
4. Device is now unlocked

### **Samsung A767 (Propel), A437, T459 (Gravity)**

1. Power on without SIM.
2. Type in #7465625\*638\*Unlock code#
3. Device should say: "Network Lock Deactivated"
4. Phone may reboot, and is currently unlocked.

### **Samsung SGH-T459 (Gravity)**

1. Power on without SIM.
2. From the standby screen, use the dial pad to enter the number sequence.
3. Enter: #7465625\*638\*Unlock code#
4. Device should say: "Network Lock Deactivated"

### **Samsung i900 / Omnia**

1. Switch ON your phone with a Non - Accepted SIM Card.
2. Enter the pin code of this refused SIM Card.
3. Device is now asking for another pin code.
4. Then enter the Unlock Code

### **Samsung Zxxx, Dxxx, Pxxx & F490 (ex : Z140, D520, P200, etc...)**

1. Switch ON your phone with a Non - Accepted SIM Card.
2. Enter: #7465625\*638\*CODE#

### **Samsung Z510 et Z320i et Z650i :**

1. Switch ON your phone with a Non - Accepted SIM Card.
2. Enter: \*\*UnlockCode#

### **Samsung i450 & i560**

1. Switch ON your phone without SIM Card.
2. Compose #PW+UnlockCode+1#

# Unlock Instructions by EarthWizeCellular.com

---

The letter P appears - press the star button (\*) 3 times quickly.

The letter W appears - press the star button (\*) 4 times quickly.

The letter + appears - press the star button (\*) 2 times quickly.

## Samsung i780

1. Insert an Non - Accepted SIM Card.
2. Enter the pin code to SIM Card.
3. At the top of screen an "exclamation mark" icon will appear.
4. Click on the "exclamation mark" icon.
5. The link "settings" will appear - click on it.
6. Virtual keyboard appears on screen with Enter PIN prompt.
7. Enter your 8-digit Unlock Code.

## Samsung SGH-P207

1. Reset to original factory settings by entering: \*2767\*3855#
2. The phone will reboot.
3. Then insert a SIM Card that is from another network that your phone is not locked to.
4. A "Wrong SIM" message will come up on the screen
5. When message appears enter: \*#9998\*3323#
6. At this time a white screen will appear which says "exit"
7. Tap the right soft key, (occasionally it will not go to the next screen, if so press the down key)
8. From the menu that appears scroll down to the malloc Fail option, this will reboot, and normal service screen will appear.
9. Then type \*0141# and press the green call key, "Personalized" will appear on the screen, and the name of the current SIM Card provider will appear on the screen.
10. Turn phone off, and then turn on.
11. Go to menu by tapping left soft key, then settings in bottom right hand corner, then choose option number 7, security, then choose option number 6, SIM Lock, select option 1 disable.
12. Then enter 00000000 (eight zeros), the message will come up SIM Lock disabled with a check mark, your phone is now unlocked to use with other carriers.

## All other Samsung

1. Switch ON your phone with a not Accepted SIM Card.
2. Phone will ask for "Password"
3. You can now enter the Unlock Code we sent to you.

OR (if phone show "Insert Correct SIM Card")

1. Switch ON your phone with a Non - Accepted SIM Card.
2. Enter: #0111\*UnlockCode#